TEKO AIR (Class I. and II.)


Installation instructions




1. Unpack the luminaire.



3. Connect the 3 core cable to the power supply (Class I.).

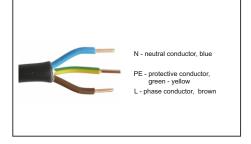


6. Connect the 2 pin connector Gesis to the power supply (Class II.).

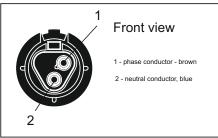

2a. Prepare the luminaire for the instalation. With a connector gesis.



4. Connect the 2 core cable to the power supply (Class II.).

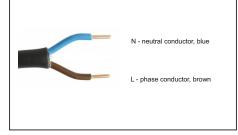


7. Fix the luminaire on the outrigger installation. Tighten allen screws with tightening torque of 8 Nm.



2a. Prepare the luminaire for the instalation. With a cable.




5. Connect the 3 pin connector Gesis to the power supply (Class I.).

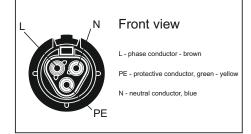

TEKO AIR (Class I. and II.)



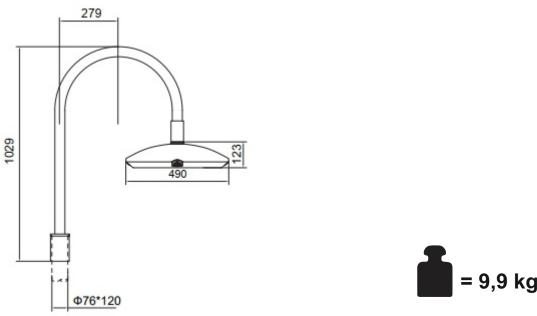

- Recomended installation height up to 6 meters.

- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

 
- The light sources in this luminaire is only replaceable by the manufacturer or their technicians or a qualified person.

- Caution, risk of electric shock 1/4

- Do not look directly or with optical aids into the light source RG1 d > 0,5 m
- This luminaire operates at mains voltage 220-240V, 50-60 Hz.

Any modification to this luminaire is forbidden.

- Replace any cracked protective shield.



Cleaning:

clean the luminaire with the standard detergents. DO NOT use any abrasive detergents or solvents.

Instalation and maintainance:

can provide only a person with an electrical qualification.

ELEKTRO-LUMEN, s. r. o. Hranická 505 753 61 Hranice IV - Drahotuše Česká republika Telefon: +420 581 699 411 Fax: +420 581 699 419 E-mail: el-lumen@el-lumen.cz Web: www.el-lumen.cz



The company reserves the right to change technical data and printing errors. Copyright o ELEKTRO-LUMEN, s. r. o.