

1. Unpack the luminaire.



4. Fasten the light fixture to the prepared mounting location.




2. Loosen the screws and open the cower.




5. Adjust the inclination of luminaire according to the scale.

## Adjust the inclination of luminaire according to the scale Tighten the screws

 
## 3. Connect the supply power cable to the terminal block

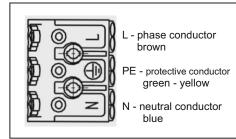




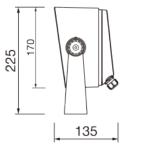







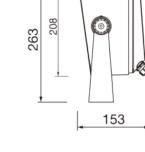

NITA M

 = 5,7 kg

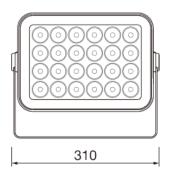





Recomended installation height up to 6-15 meters.

str. 1 v.09/2022

## NITA S, M



- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

- The light sources in this luminaire is only replaceable by the manufacturer or their technicians or a qualified person.

- Caution, risk of electric shock
- Do not look directly or with optical aids into the light source RG1 d > 0,5 m



- This luminaire operates at mains voltage 220-240V, 50-60 Hz.
- Any modification to this luminaire is forbidden.

Cleaning:

clean the luminaire with the standard detergents. DO NOT use any abrasive detergents or solvents.

Instalation and maintainance: can provide only a person with an electrical qualification.

ELEKTRO-LUMEN, s. r. o. Hranická 505 753 61 Hranice IV - Drahotuše Česká republika

Telefon: +420 581 699 411 Fax: +420 581 699 419 E-mail: el-lumen@el-lumen.cz Web: www.el-lumen.cz



The company reserves the right to change technical data and printing errors. Copyright o ELEKTRO-LUMEN, s. r. o.